


Installation and Operation Manual



for LITTON CW and PULSE TRAVELING WAVE TUBES

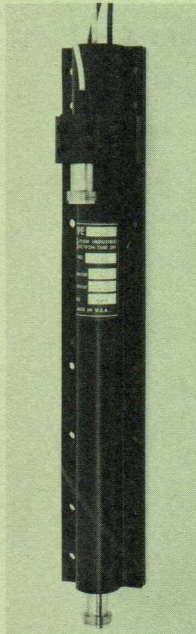

LITTON INDUSTRIES
Electron Tube Division

960 INDUSTRIAL ROAD, SAN CARLOS, CALIFORNIA

RECEIVING INSTRUCTIONS

This traveling wave tube has been carefully tested and inspected before shipment and every precaution has been taken to protect this device from damage during transit.

- A. When unit arrives, open the container and carefully remove the material packed around the tube.
- B. Visually inspect the tube for any damage.
- C. Should the tube be damaged, please notify your nearest Litton representative for further instructions. (See back cover for telephone number)

DO NOT OPERATE THE TUBE

- D. If everything appears to be intact, proceed with the following installation instructions.

CAUTION: Read **all** instructions carefully before operating tube.

CW OPERATION